

# 尺寸140X210MM

## 正面

## 反面

### AIR PUMP SUCTION CUP

Concentration, concentration, professionalism



#### • Installation and operation instruction •

Before installing and using the product, please read all the instructions in the manual carefully and keep the manual properly.

**Concentration,  
Concentration,  
Professionalism**

#### Air Pump Suction Cup **Concentration, Concentration, Professionalism**

##### Parameter specification



Model	A-008-2
Size of rubber tray	8 inches (203mm)
Handle length	110mm
Pressure retaining suction	200kg
Rated voltage	3.7V
Rated power	3.5W
Battery capacity	2000mA
Charging time	1.5-3Hours
Duration of use	>8h

##### Function description

Start/inhale	Insert battery (Built-in battery does not need to be plugged in) Hold down the power button for 2 seconds (in standby mode)
Shutdown/ pressure relief	Double click the power button (enter the standby state after shutdown)
Inhale/ replenish air	Automatic inhalation after starting, automatic shutdown after reaching the set maximum pressure value, slight air leakage without operation for a period of time, automatic start and replenishment after reaching the set minimum safety pressure value.
Charge	Built-in battery: the charging mode is TPC interface, charging for 1.5 hours, in the upper left corner of the screen, until the full state is displayed, External battery: Take out the battery, use the AC round charger, charge for 3 hours, and the battery will show 100 as full state

##### Procedure of use

1. Place the product on the surface of the adsorbed workpiece, and press the power button for about 2s in the hibernation state Press the power button for about 0.5s to turn on the machine in the standby state.
2. Automatic suction after starting, the air pump automatically stops after reaching the set maximum pressure value (above 40kpa) When the suction cup is adsorbed on the surface of the workpiece, the workpiece can be normally lifted for operation.
3. The suction cup adsorbed on the workpiece surface will automatically detect the air pressure value, such as a long time no operation suction cup exists lightMicro air leakage, when the set minimum safe pressure value is reached, the air will be automatically turned on.

##### Matters needing attention

1. Clean the dust and debris on the suction cup in time to keep the surface of the adsorbed object freeConcave and convex, neat, clean, no water, grease and other foreign bodies
2. Keep the bottom of the suction cup smooth and free of foreign bodies and the dustproof cotton (white).
3. If the air pressure does not reach the set tensile value within 15 seconds after starting, the air pump will stop working, which will protect the motor.
4. When the value on the battery display is below 20(0-100) during use, it should be timely Charging to prevent accidents caused by insufficient use of the product.
5. The product cannot be washed.